


## 2" Mushroom Plunger Replacement Installation Instructions

*The operator, as received from the factory, MUST be partially Disassembled before it can be mounted.*

1. Loosen (T-10, 4-40) screws and spread hub halves to allow plgr head to fit on shaft.
2. Ensure plunger head is fully inserted onto shaft.
3. Tighten (2) screws, alternating to ensure alignment, to 14 in-lbs. torque.
4. Test switch for safe operation.

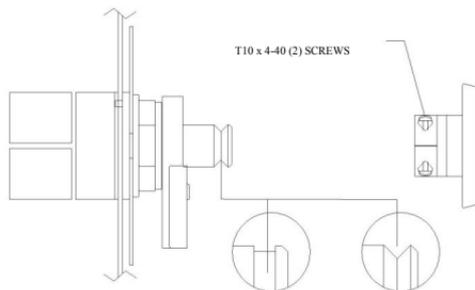

### WARNING - DANGER

These products should only be used where point-of-operation guarding devices have been properly installed and maintained so that all appropriate OSHA and ANSI B11.1 regulations and standards are met. Misapplication of these products on machinery lacking effective point-of-operation safeguards can cause serious injury to the operator of that machinery.

### AVERTISSEMENT - DANGER

Ces produit doivent seulement être utilisés sur des postes à risque correctement sécurisés et entretenus afin d'être conforme aux standards et réglementations en vigueur (CSA, CLC). Un mauvais usage de ces produits sur des machines et des postes de travail non sécurisés de manière efficace peut causer des blessures graves au technicien maniant ces machines.

**REES, Inc. Fremont, IN 46737 260-495-9811 FAX 260-495-2186 [www.reesinc.com](http://www.reesinc.com)**

04853-502 Rev. B 120216